

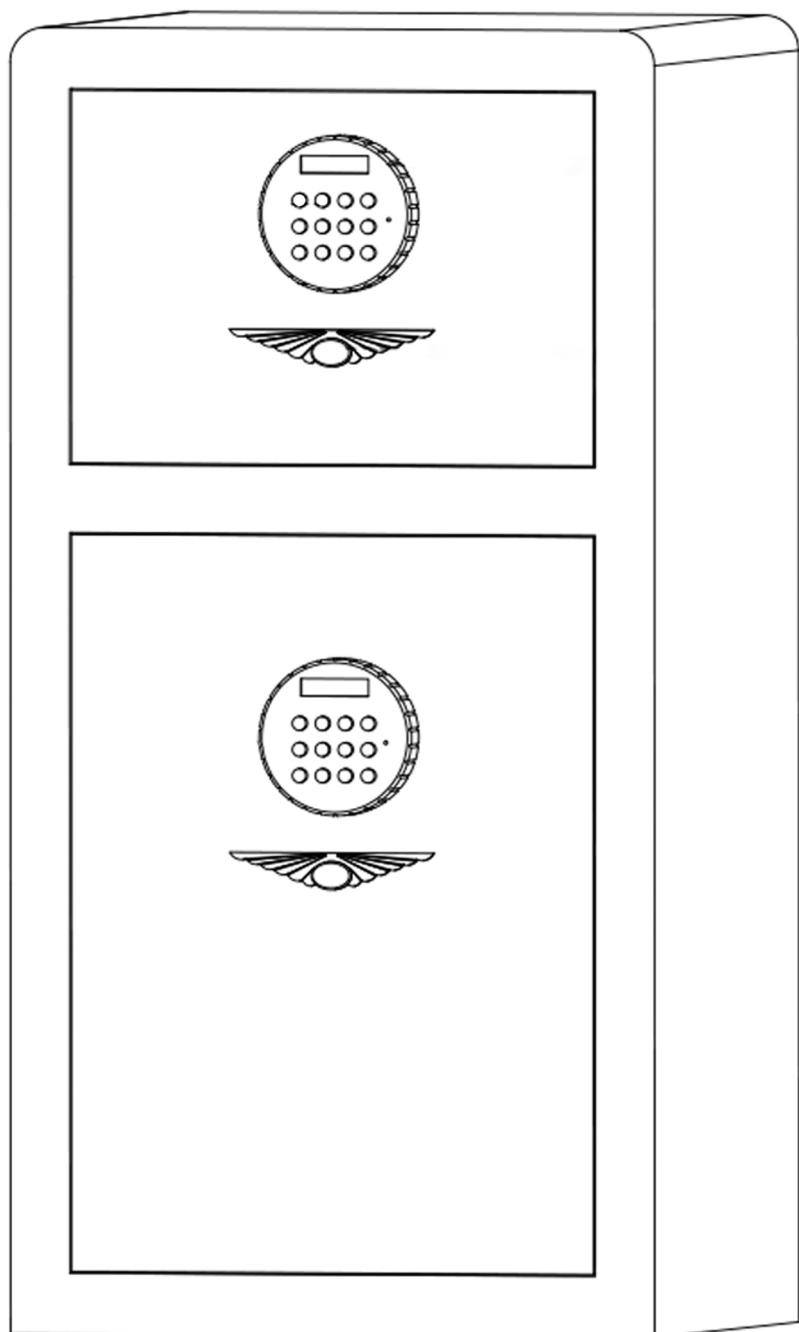


Instruction Manual


DIGITAL SAFES WITH ELECTRONIC LOCK

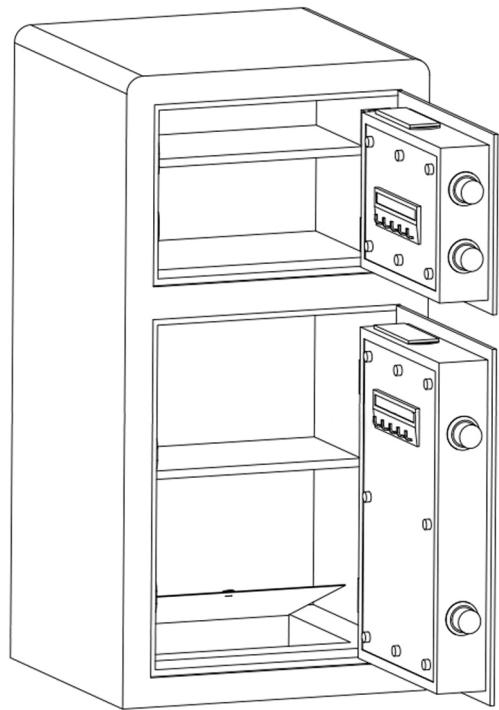

Component Description

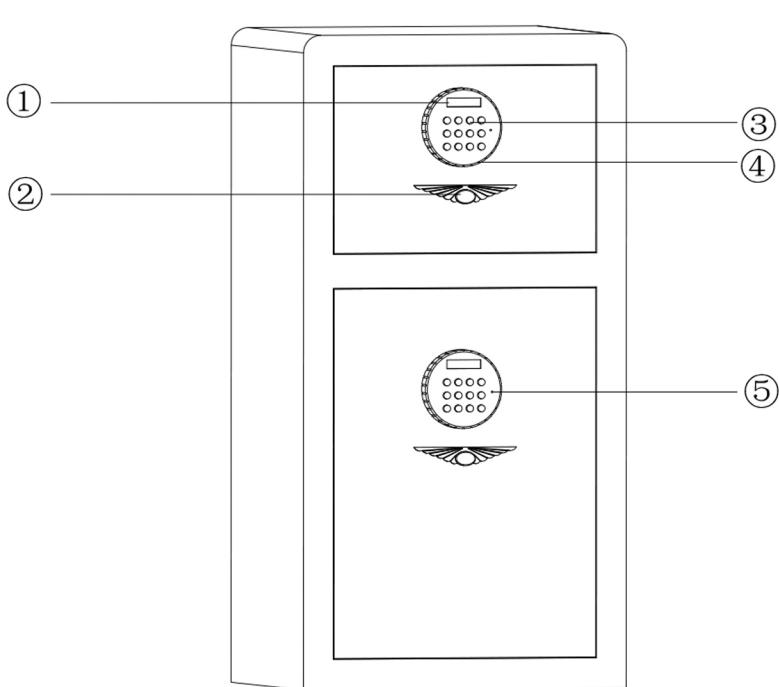

75H

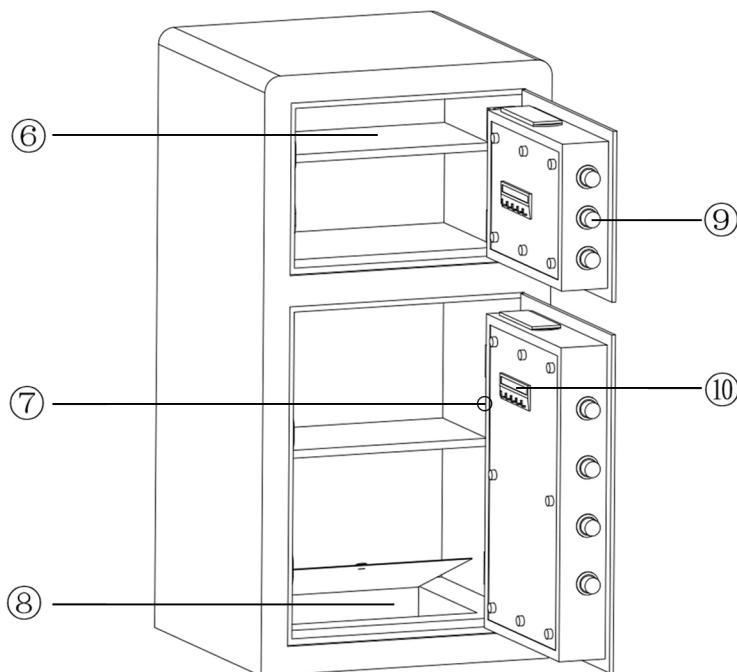

90H


- ① LCD Display Screen
- ② Hidden keyhole
- ③ Digital keypad
- ④ Knob
- ⑤ External Power Supply hole
- ⑥ Removable shelf
- ⑦ Reset button
- ⑧ Hidden Bottom Safe
- ⑨ Solid Pry Bolt
- ⑩ Key Hook

Package List:

Item	Picture	Qty	Item	Picture	Qty
User Manual		1	Emergency Battery Box		2
Spare Key		4	Golden Foot Mat		4
Hidden Bottom Safe Keys		2	Fireproof Bag		1

How To Open The Safe


1. Open the door with key

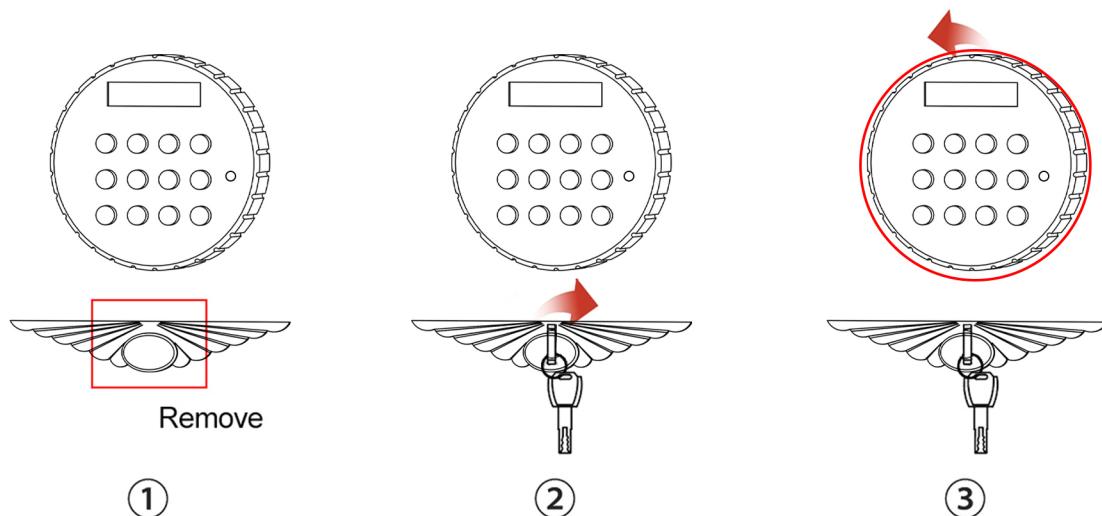


- ① Press the edges to remove the magnetic keyhole cover
- ② Insert spare key and turn it Clockwise
- ③ Turn the knob counterclockwise to open the door

⚠ NOTE: Please do not leave the emergency key in the safe!


2. Open the door with password

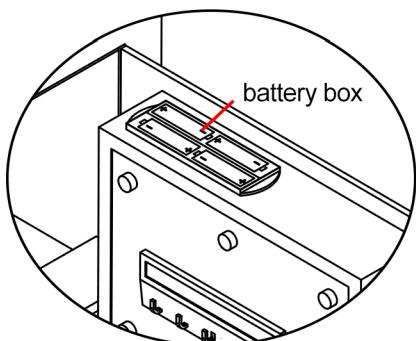

①

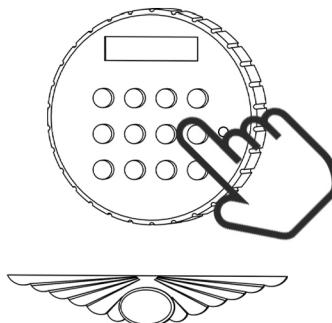

②

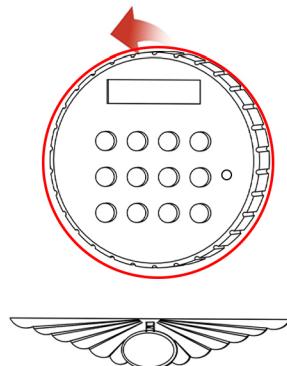


③


- ① Install 4 AA batteries
- ② Input correct 3-8 digit password and press "#" to confirm
- ③ Turn the knob counterclockwise to open the door

NOTE: The default factory password is 159#


3. Open the door with external battery box + code + handle

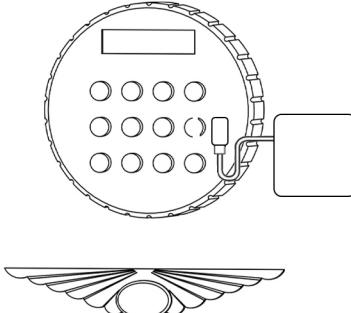

①

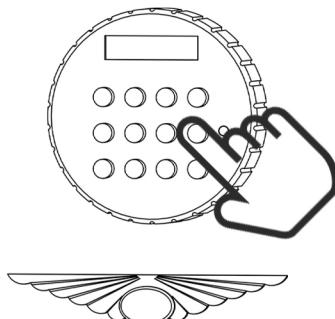

②

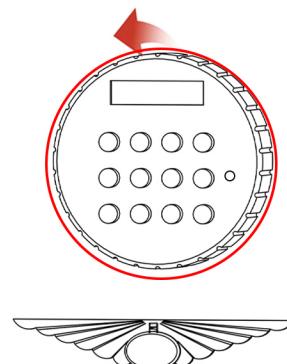

③


- ① Insert external battery box (4AA batteries are required)
- ② Input correct 3-8 digit password and press "#" to confirm
- ③ Turn the knob counterclockwise to open the door

NOTE: When the internal battery is dead or the spare keys are lost, the external battery box can be used to unlock the door

How to setup new password

How to setup new password

- ① With the door open, press the red re-set button behind the door (just like right picture)
- ② Enter a new 3-8 digit password and press the "*" to confirm

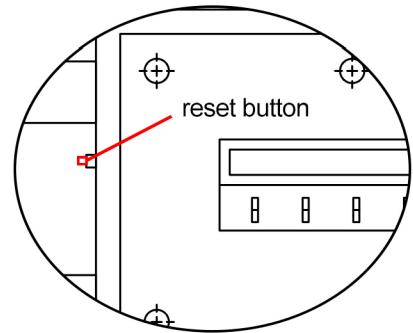

Dual Smart Alert System

1. Wrong Password Alarm

Three wrong entries will lock the keypad for 30 seconds and the buzzer will beep

2. Vibration Alert

Press "*00" to activate. The buzzer will beep when the safes subjected to vibration

Press "*99" to turn off the vibration alert

NOTE: The vibration alarm must be reactivated after each door opening, or it will remain inactive

Silent Mode

- ① Press "*633" to turn off the keypress sound
- ② Press "*66" to turn on the keypress sound

Installation Instructions

No pre-drilled holes (Only for 90H):

This product is designed for direct placement and use. There are no pre-drilled holes on the bottom or back. Do not attempt to drill or mount the product, as this may cause damage.

Pre-drilled holes (Only for 75H):

There are two pre-drilled holes on the back, no pre-drilled holes on the bottom. You can fix it to the wall with the included bolts for added security.

Placement Guidelines:

Place the product on a clean, flat, and stable surface.

Ensure the environment is secure to prevent tipping or slipping.